


Installation Guide

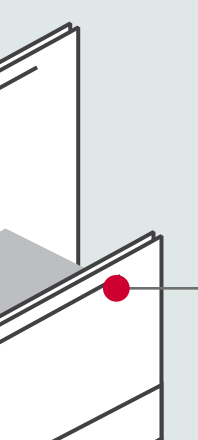


Installation Guide

Our fire tempered wood is installed in a similar way to other timber cladding.

Cladding Fixing

Showing horizontal cladding and vertical battens.

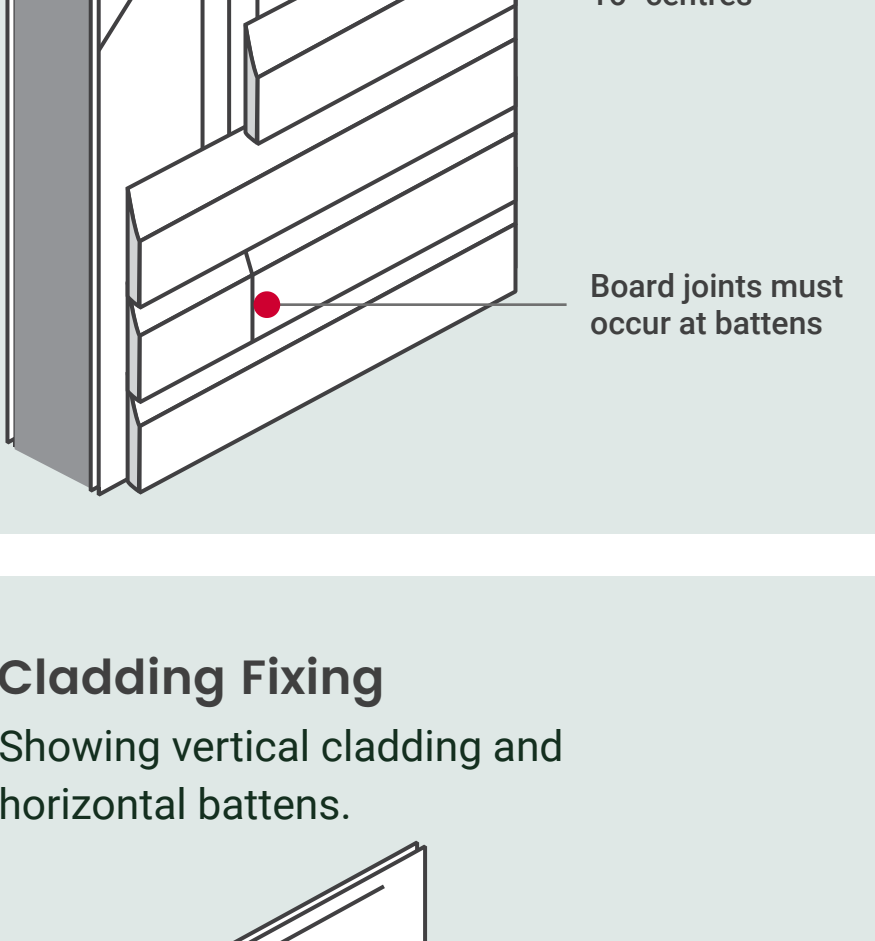


Cladding Fixing

Showing vertical cladding and horizontal battens.




Seasonal Installation

Timber cladding naturally contract in the dry, hot conditions of summer and expand in the rain of winter.

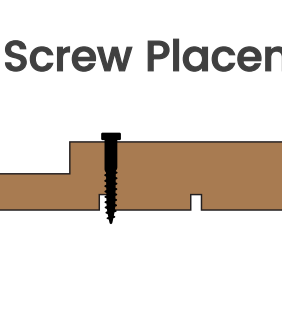


Fix the boards tight to one another in wet, winter conditions when the timber might be moist and prone to shrinkage.






In hot weather when the timber is very dry leave a small expansion gap to allow for timber expansion.

Screw Placement Guideline

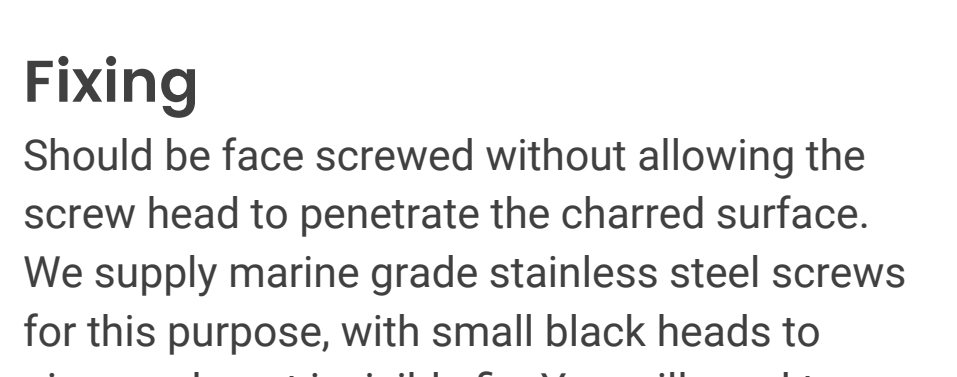

Cladding mounting

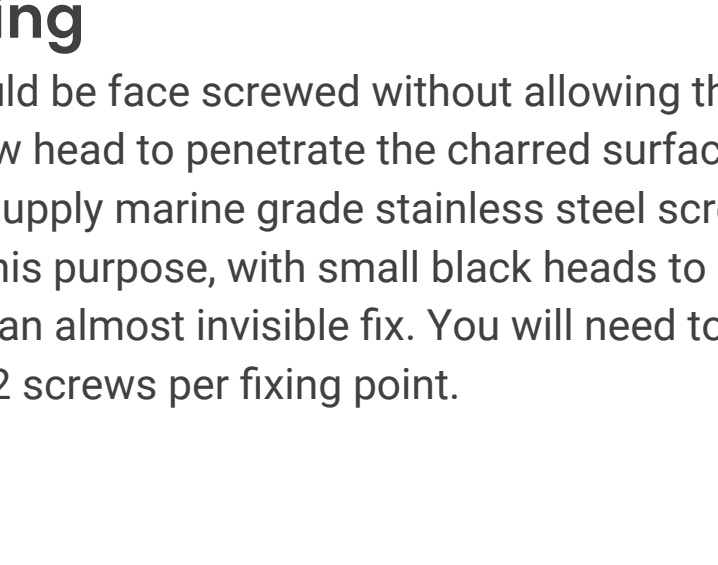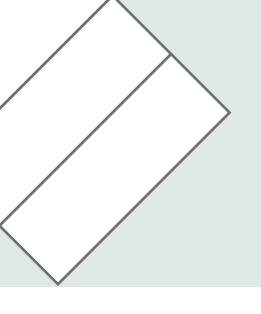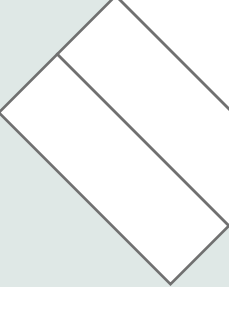


Screws

Fixing

Should be face screwed without allowing the screw head to penetrate the charred surface. We supply marine grade stainless steel screws for this purpose, with small black heads to give an almost invisible fix. You will need to use 2 screws per fixing point.

Screwing distance

2 screws every 24"

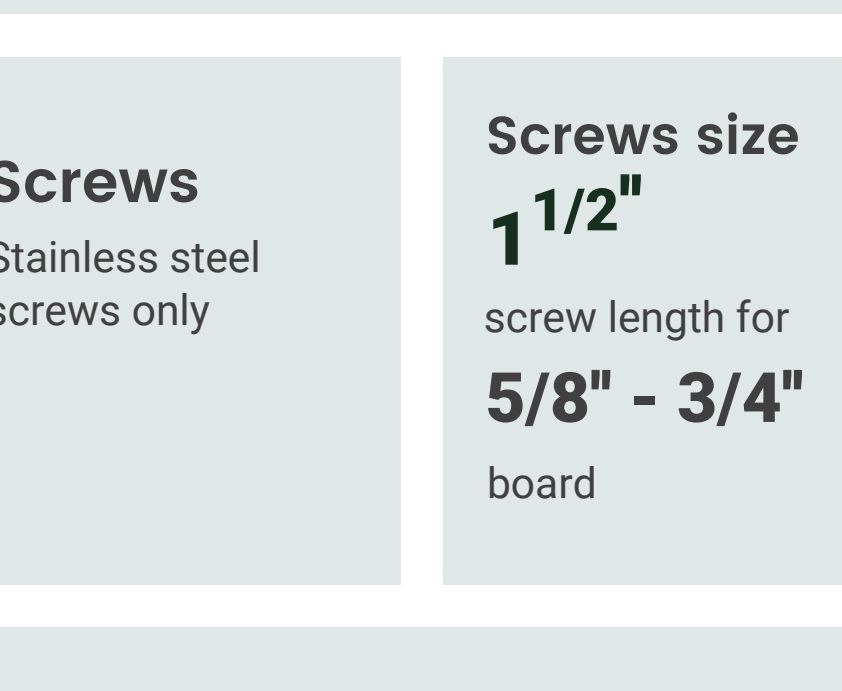

Screws

Stainless steel screws only

Screws size

1 1/2" screw length for 5/8" - 3/4" board

Screwing depth

Make sure screw head line is correct



Feel free to contact us for any advice

info@charredwood.ca / +1 (647) 282-3962